


SMART Upflow Energy Saving Dispenser (Tri-Temp)

Model: HC91L-UFD

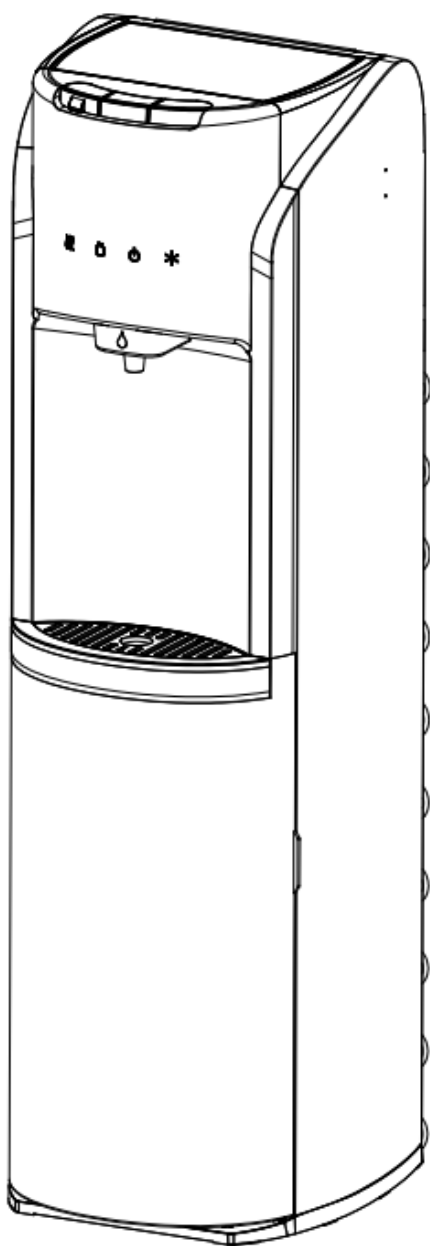

User Manual

Read this instruction manual before using the appliance.

This appliance is intended to be used indoor only.

Please call our Service Department if encounter any problems when using the appliance.

Tel : 2460 2663

Fax : 2464 4833

Email : info@tiptopwater.com.hk

Website : www.tiptopwater.com.hk

IMPORTANT NOTES

1. Dispenser should be placed on a hard level surface. Leave at least 10cm behind the dispenser for ventilation.
2. Place the dispenser in a dry and cool area and keep away from direct sunlight.
3. Unplug the power cord if the dispenser will not be used for a long time.
4. Do not modify the power plug or use an extension cord with the dispenser.
5. When the power cord is unplugged or the power supply to the dispenser is discontinued, wait for at least 3 minutes before re-connecting the power.
6. When cleaning the dispenser, unplug the power cord and use a clean cloth with neutral washing to wipe the surface of the dispenser. Do not spill the dispenser with water. Do not put the dispenser in water.
7. Do not place dispensers or bottled water near expensive furniture, appliances or power sources as water spill can cause serious damages. It is recommended to place the dispenser on a plastic mat. Tip Top Water Group will not be responsible for claims against damages caused by water spill from carboy bottle water drinking system.

! Caution : Unplug the power cord before cleaning and/or inspecting the dispenser.

! Caution : Hot water of this dispenser reaches 85°C, beware when using hot water.

! Warning : If the power cord is damaged, you should call for service.

! Warning : This dispenser is not recommended to be used by children, elderly or any person in needed without accompanied and guidance by an adult.


! Warning : Do not let children to play with the dispenser.

GENERAL PRECAUTIONS

1. Should the condensing coil be covered by dust or foreign particles, clean the coil with a dry cloth.
2. We recommend the dispenser to be fully sanitized in every 9 months. Call our service department for details.
3. If there is any problem with the dispenser, call our service department.

Tip Top Water Group shall not be liable for any conditions or damages resulting from accidents, alterations, exposure to elements, misuse abuse or failure to follow our instructions with respect to installation, cleaning, or maintenance. In case of any dispute, Tip Top Water Group's determination should be final.

DISPENSER DIAGRAM

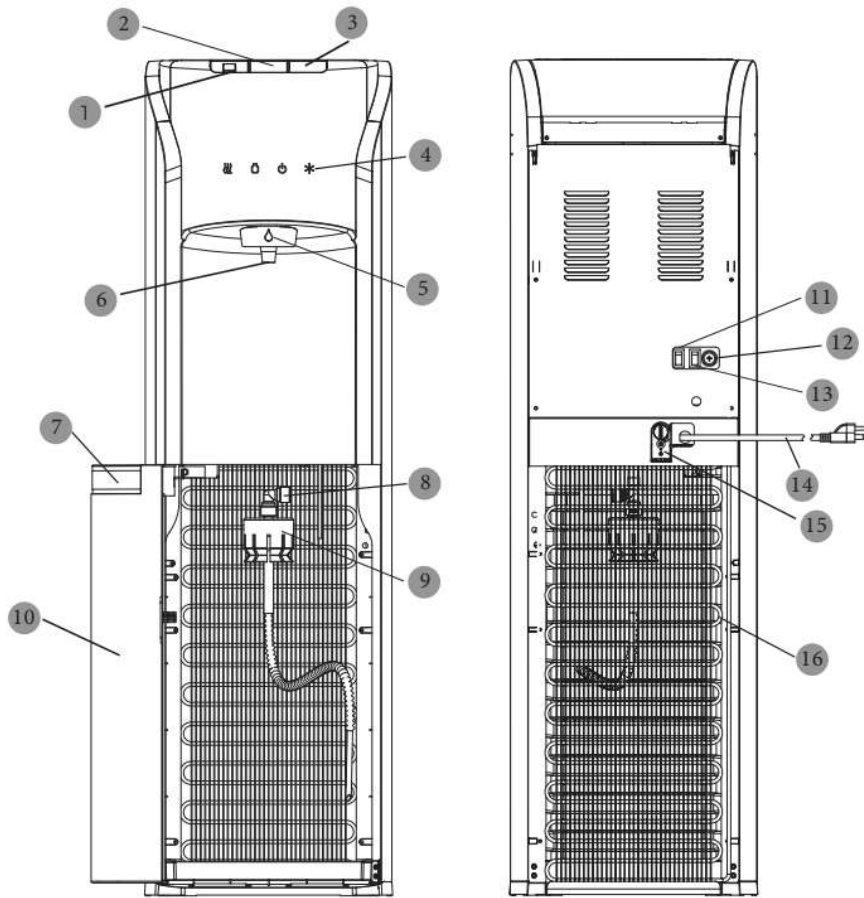

1. Hot Water Faucet (with safety lock)
2. Cold Water Faucet
3. Ice Water Faucet
4. LED Indicator
 - Red indicator = Hot Water Indicator
 - Orange Indicator = Empty Bottle Indicator
 - White Indicator = Power Indicator
 - Blue indicator = Ice Water Indicator

5. Spigot Light
6. Spigot
7. Drip Tray
8. Tube Connector





9. Water Tube (with adjustable length)
10. Door (pump will not operate if the door is not closed properly)
11. Ice Water Switch
12. Fuse
13. Hot Water Switch
14. Power Code
15. Hot Water Drain (Caution: Beware of Hot Water)
16. Condenser

NOTES FOR INSTALLATION

1. Place a new water bottle next to the dispenser. Remove the label and sticker of the cap (no need to tear the cap off). Open the door, adjust the stainless steel water tube to desire length. Insert the water tube into the cap and push downward until the transparent membrane opens. Push the water bottle inside the bottle storage compartment through the ramp. Close the door. (Please note the pump cannot operate if the door is not closed properly.)
2. Connect the dispenser to the power supply. Dispenser would automatically start pumping water. Press the THREE faucets one by one until water comes out from all three faucets. Switch on the heating and cooling system by pressing hot water switch and ice water switch.
3. If the Empty Bottle Indicator is On, please replace the empty bottle with water.

- Remark:
1. Empty Bottle Indicator won't be on right after the bottle is empty. The dispenser will start pumping water for 3 minutes to ensure the bottle is empty before it turns on the indicator.
 2. When the Empty Bottle Indicator is On or the door is opened, the dispenser will stop heating up water to ensure safety.

LED INDICATOR

Power (White)		Off : Power Off On : Power On
Cooling (Blue)		Off : Cooling System is off On : Cooling Off : Cold water reaches desire temperature
Heating (Red)		Off : Heating System is off On : Heating Off : Hot water reaches desire temperature
Empty Bottle (Orange)		Off : No need to change water On : No water in bottle, change water

SPECIFICATIONS

Power Supply	220V ~ 50Hz
Protective Type of Anti-electric Shock	I
Rated Input (Heating)	500W
Rated Input (Cooling)	85W
Temperature	Ice: 7-10°C
	Hot: 82-90°C
Refrigerant	R134a